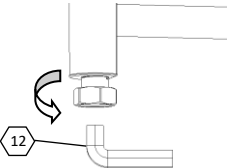
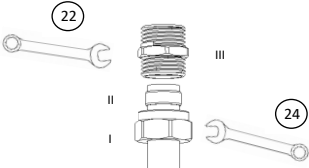
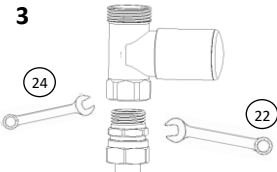
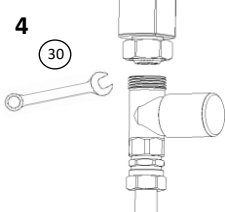
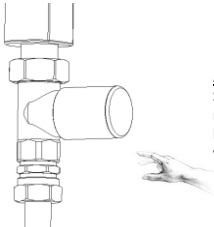
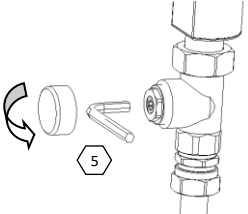


THU-307 & TMR-307

Hugo and Marcello Straight valves

Regulating valve	Lockshield valve
1 	Attention: Insert radiator tail into towel rail and tighten using 10mm hex wrench (Allen key), making sure not to damage the O-ring.
2 	Attention: 1. Slide nut (I) over the end of the 15mm pipe. 2. Slide the olive (II) over the 15mm pipe. 3. Fit the coupling (III) over the olive and pipe and tighten onto the pipe using 22mm and 24mm flat spanners. Remove any sharp burrs from the outside of the copper pipe that could damage the rubber gasket on the sealing olive when fitting it to the pipe. After tightening the coupling with a force of 15Nm, check that the pipe cannot be pulled or turned in the fitting, then check for watertightness. <i>Repeat for the lockshield side.</i>
3 	Attention: Screw the valve body onto the coupling fitted to the pipe and tighten using 22mm and 24mm flat spanners.
4 	<i>Fit the valve body in the same way to the lockshield side.</i>
5  Attention: Set the flow through the radiator by adjusting the lockshield and wheelhead valves.	5  Attention: Set the flow through the radiator by adjusting the lockshield and wheelhead valves.

Tissino warranty:

- Tissino guarantees this product for a period of 3 years from the date of purchase.
- Defective parts identified during this warranty period will be replaced free of charge or repaired at Tissino Ltd's expense.
- Tissino Ltd must be notified of any failure either by email to customer@tissino.co.uk or by telephone to 0345 582 8000.
- The defective part must be returned to Tissino Ltd with a description of the product failure and proof of purchase from the original supplier or Tissino distributor.
- The warranty does not cover parts that are subject to normal wear and tear in usual operating conditions, or vandalism.
- For full details of our warranty, please visit www.tissino.co.uk