

Hugo2 Towel Radiators

Technical Overview, Installation & Care Instructions

tissino

Congratulations on your purchase

Hugo2 radiators offer superior heating performance and can be used as a single source of heat in your bathroom. Please ensure this radiator is installed by a qualified engineer.

Installation Instructions

1. The brackets should be located centrally between the second and third rail from the top, and the second and third rail from the bottom, and 70mm in from the outer edges of the radiator
2. Drill the wall and fit the plugs (or other suitable fixings)
3. Loosen the security screw (F) and remove the internal bracket (B) and fix the outer bracket (A) to the wall.
4. Attach the brackets and cover caps (B,C,D,E) to the radiator in the positions described in 1. but don't fully tighten.
5. Position the radiator against the wall locating the brackets carefully. Tighten the security screws (reverse of 3) and tighten the cover caps by hand

Care Instructions


1. Clean the radiator with a lint free cloth with warm water only.
2. Bleeding the radiator is done by twisting the bleed valve at the back at the top of the radiator by hand. Once all the air has escaped and water starts to bleed out, tighten the screw by hand then finish with 1/4 turn using a wrench, ensuring it is watertight.

Note to installer: Please ensure the user understands and is confident with this process.

Bleeding does not apply to electric only rails

For any queries regarding installation of Hugo2 or other, please contact us using the details below.

Technical Overview

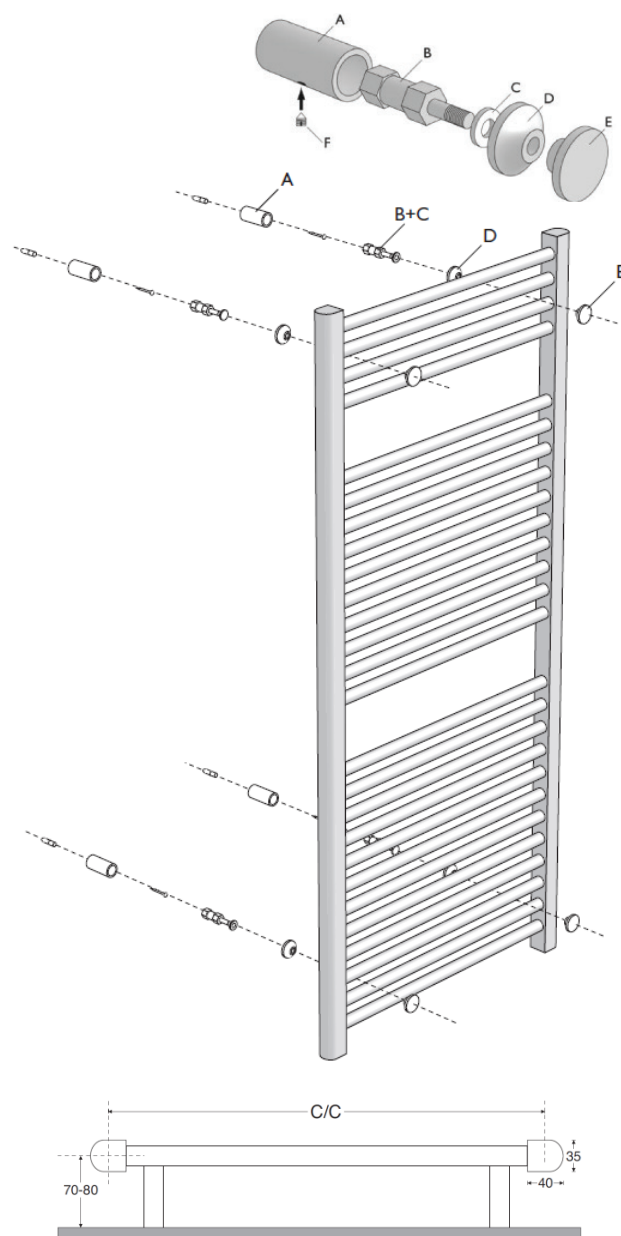

Tapping centres (C/C) for Hugo2 radiators are 40mm less than the width of the rail and 70mm out from the wall

tissino

T 0345 582 8000
E info@tissino.co.uk
W tissino.co.uk

Lyncastle Road
Appleton Thorn
Warrington WA4 4SN

