



Congratulations on your purchase

Ampio Bar radiators offer superior heating performance and can be used as a single source of heat in your bathroom. Please ensure this radiator is installed by a qualified engineer.

AMPIO BAR

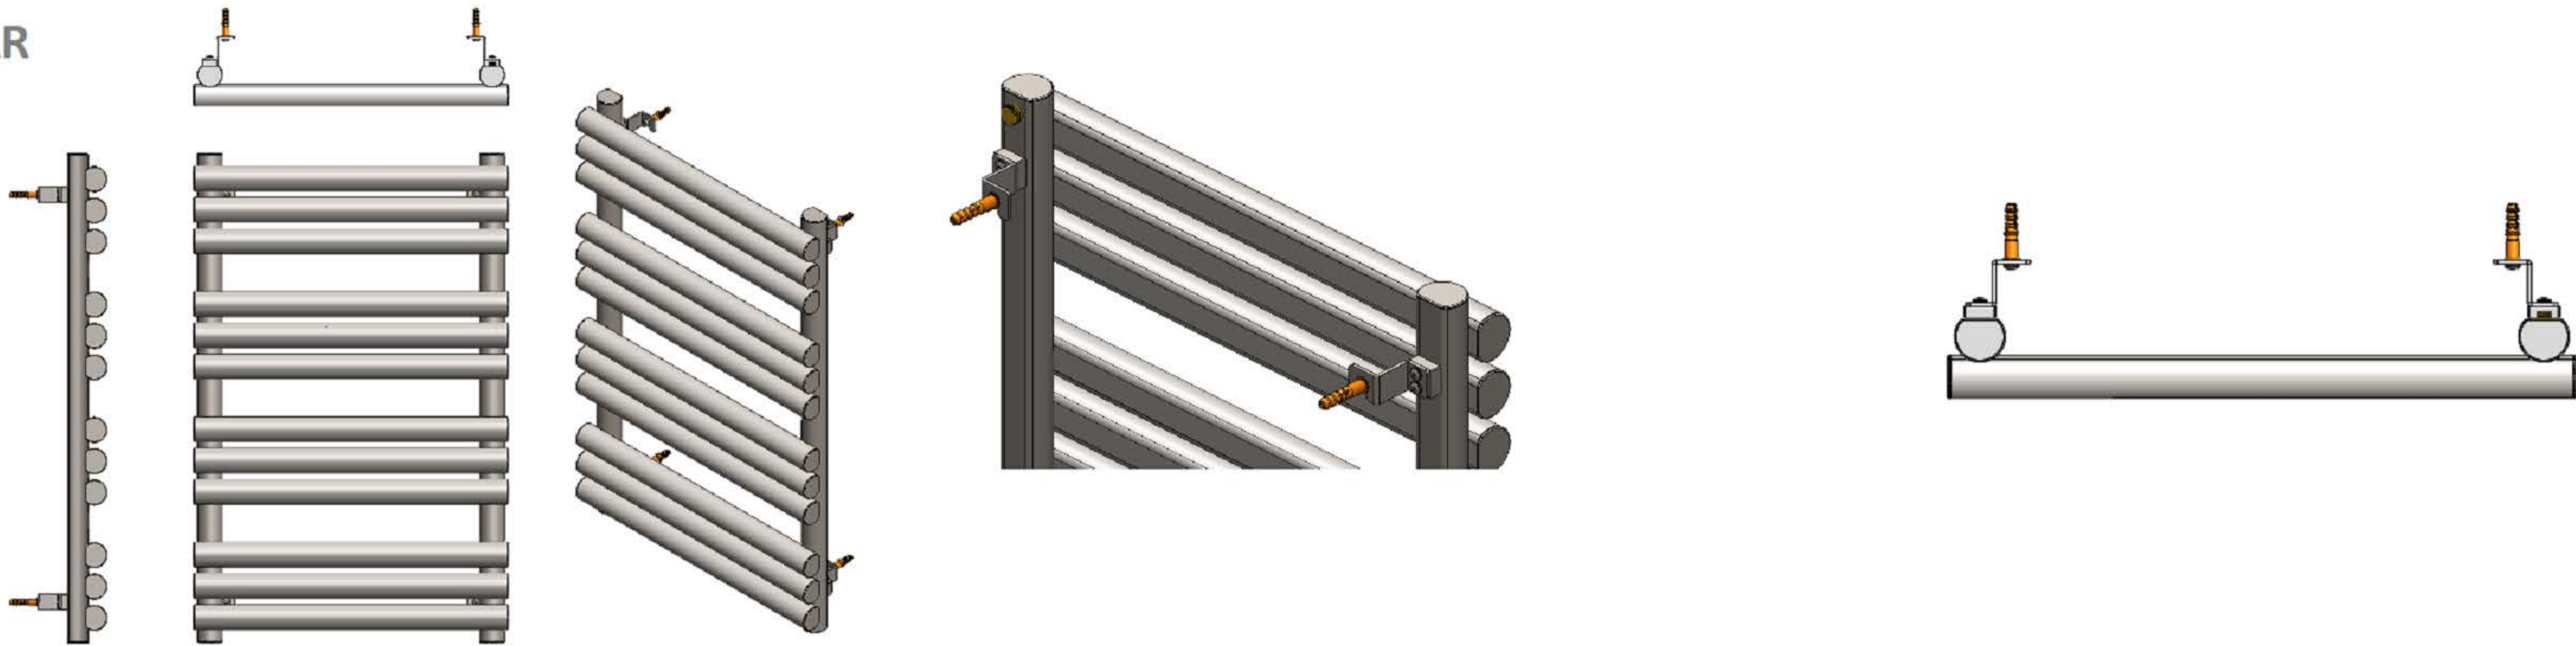


Step 1
Secure the bracket to the back of the radiator with bolts.

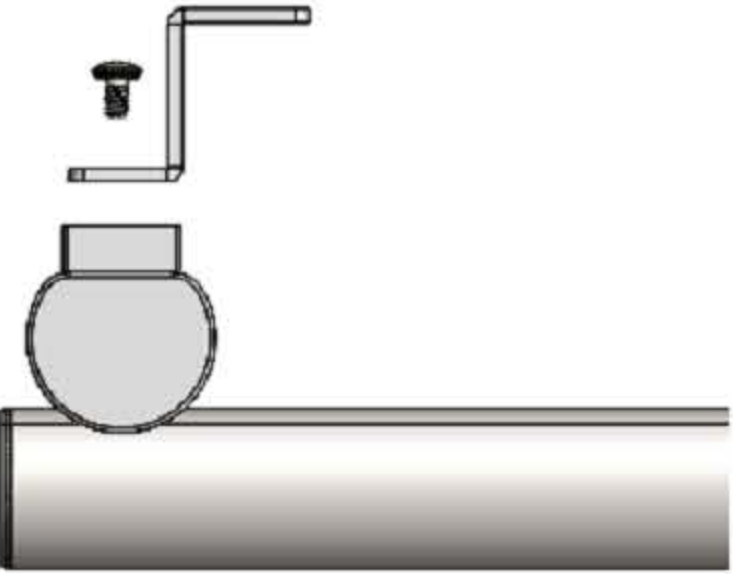


Use screwdriver, maximum 2,5Nm.

Step 2

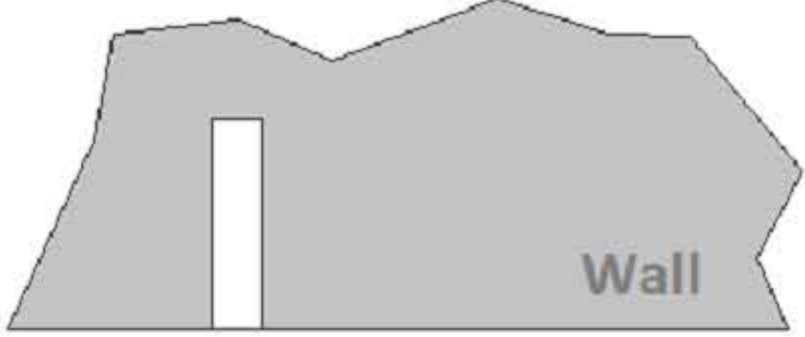


Place the product against the wall and mark the points to be drilled.
Drill the wall.

Step 3

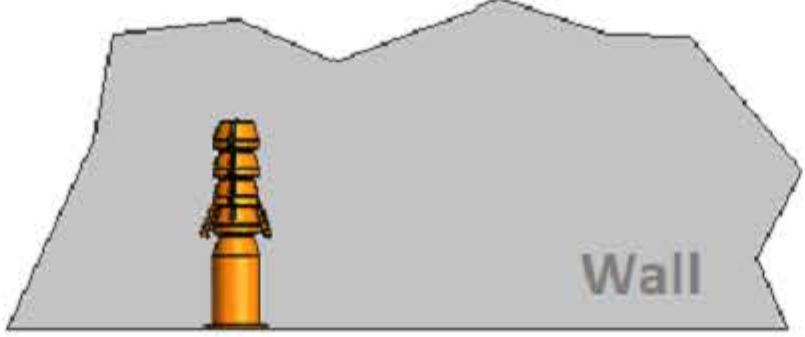


Place the dowels into the holes.

Step 4

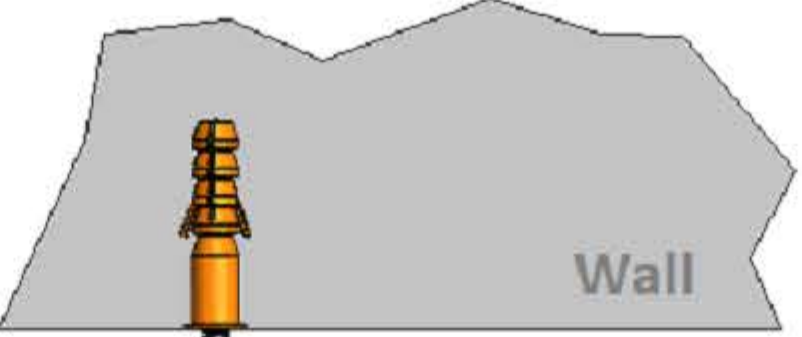


Place the screws into the dowels and tighten them a little.

Step 5

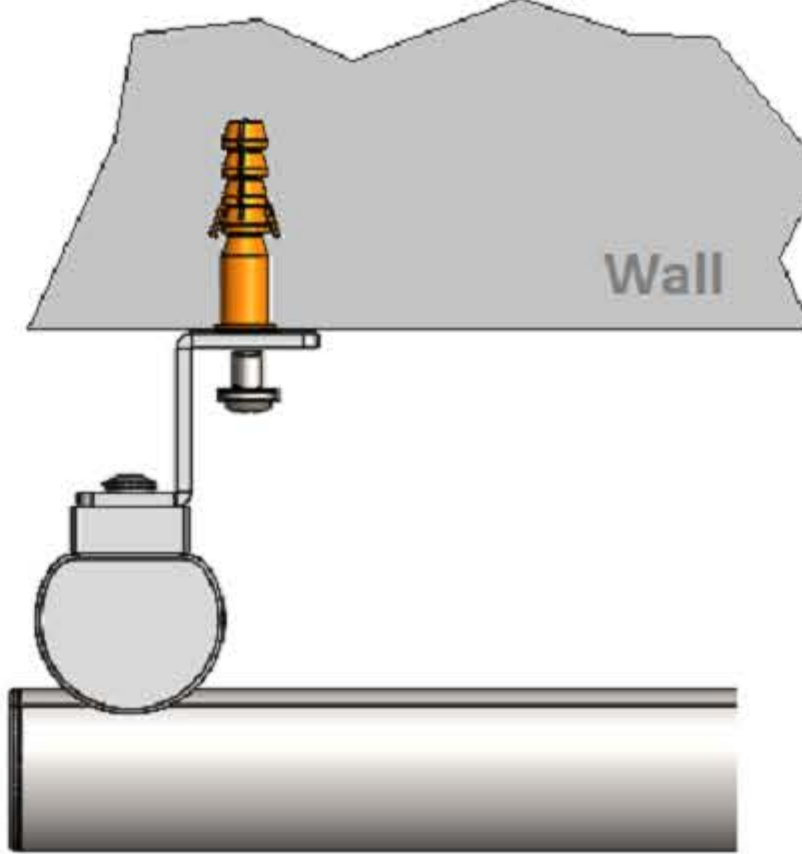

Hang the radiator on the screws.

Step 6

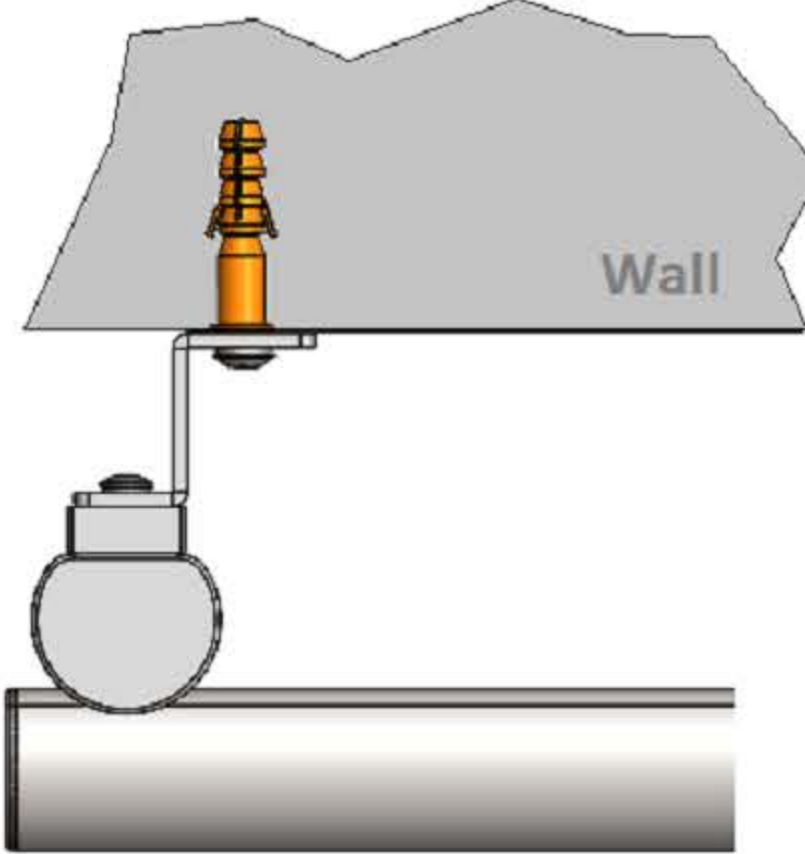

Tighten the screws.

Care Instructions

1. Clean the radiator with a lint free cloth with warm water only.
2. Bleeding the radiator is done by twisting the bleed valve at the back at the top of the radiator by hand. Once all the air has escaped and water starts to bleed out, tighten the screw by hand then finish with 1/4 turn using a wrench, ensuring it is watertight.

Note to installer: Please ensure the user understands and is confident with this process.

Bleeding does not apply to electric only rails

For any queries regarding installation of Ampio Bar or other, please contact us using the details to the right.

