



Congratulations on your purchase

Ampio Open radiators offer superior heating performance and can be used as a single source of heat in your bathroom. Please ensure this radiator is installed by a qualified engineer.

AMPIO OPEN

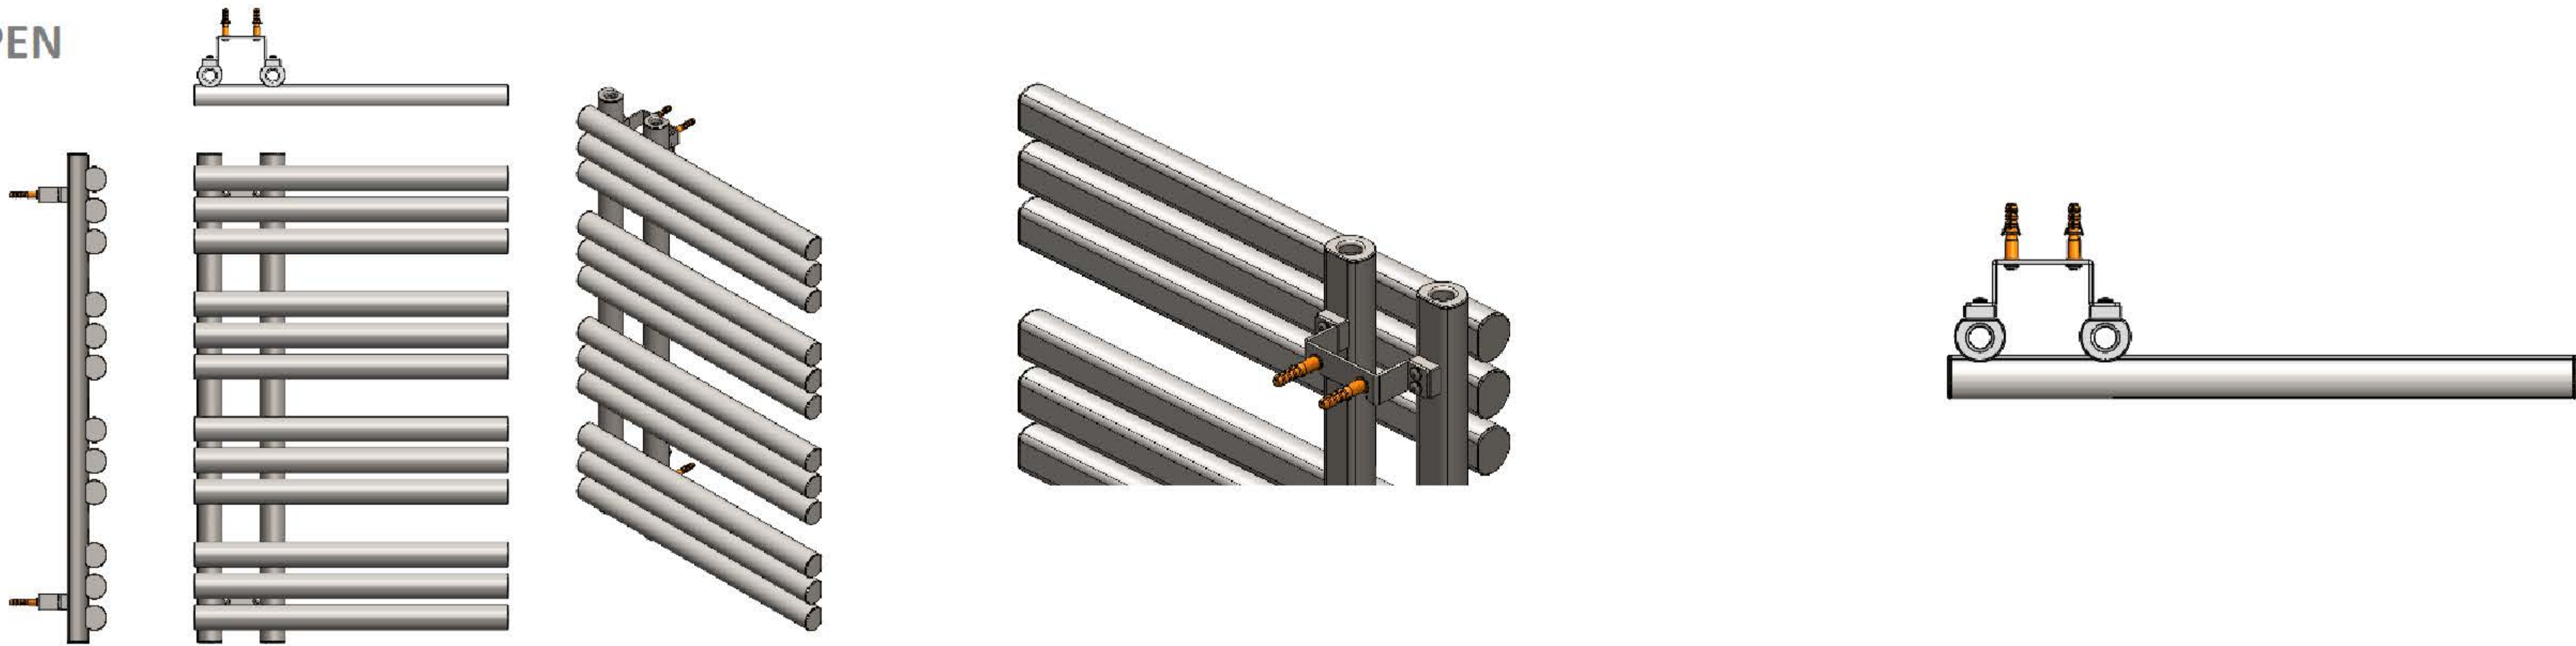


Step 1
Secure the bracket to the back of the radiator with bolts.

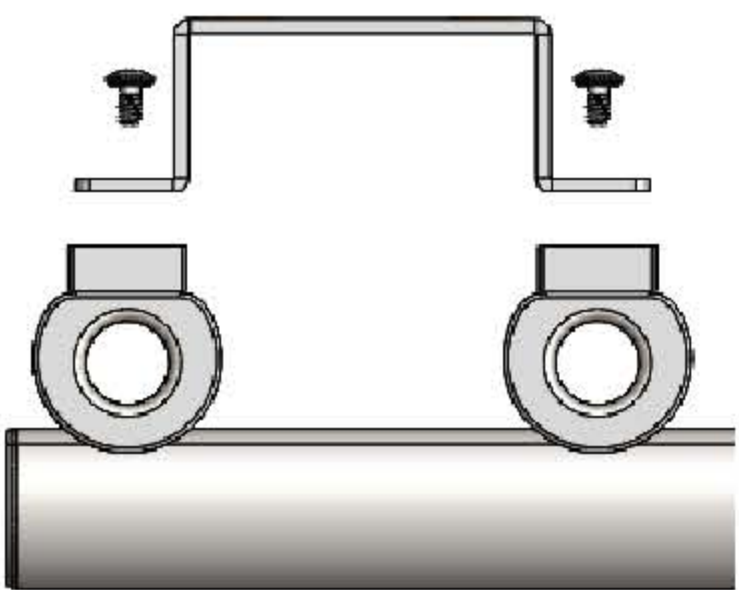


Use screwdriver, maximum 2,5Nm.

Step 2

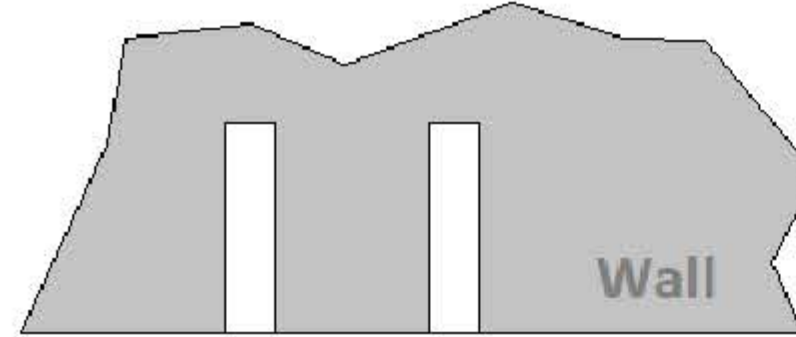


Place the product against the wall and mark the points to be drilled.
Drill the wall.

Step 3

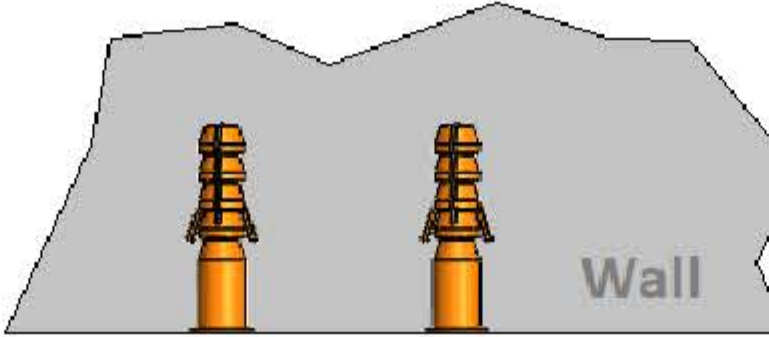


Place the dowels into the holes.

Step 4

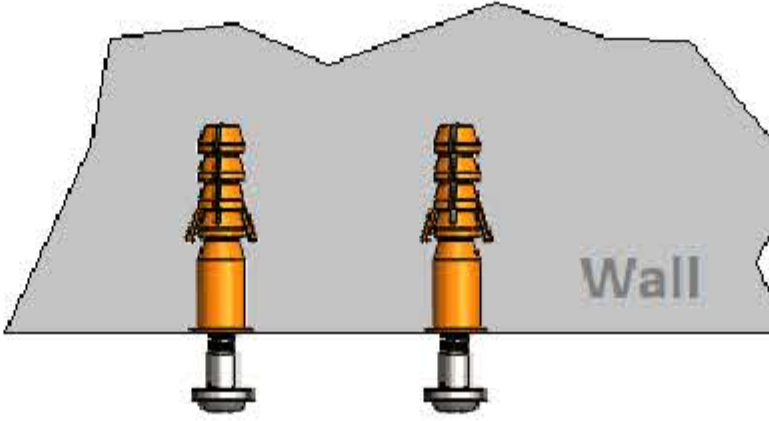


Place the screws into the dowels and tighten them a little.

Step 5

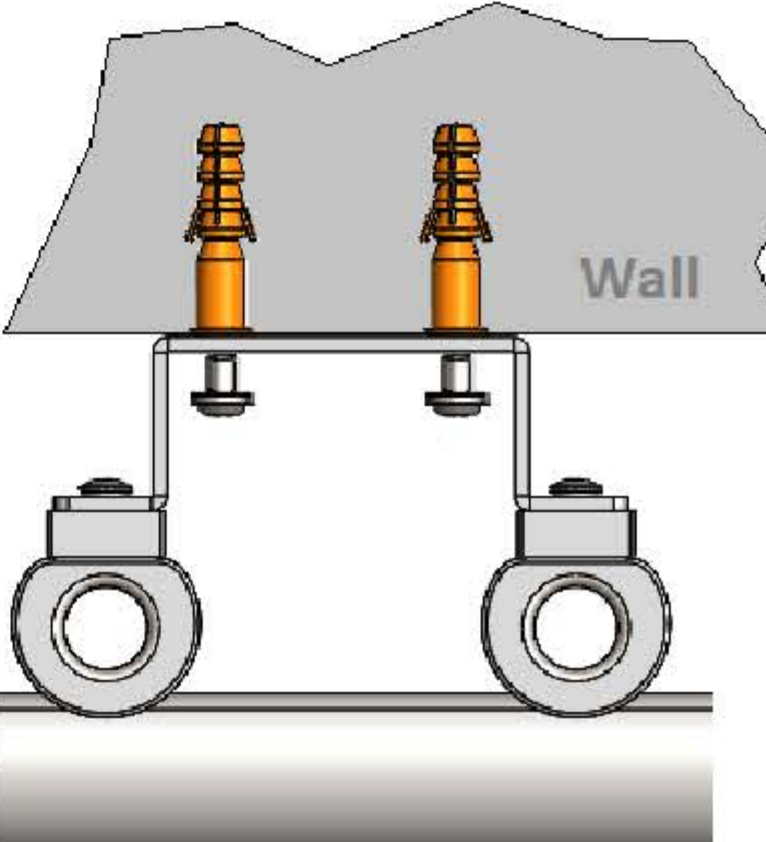

Hang the radiator on the screws.

Step 6

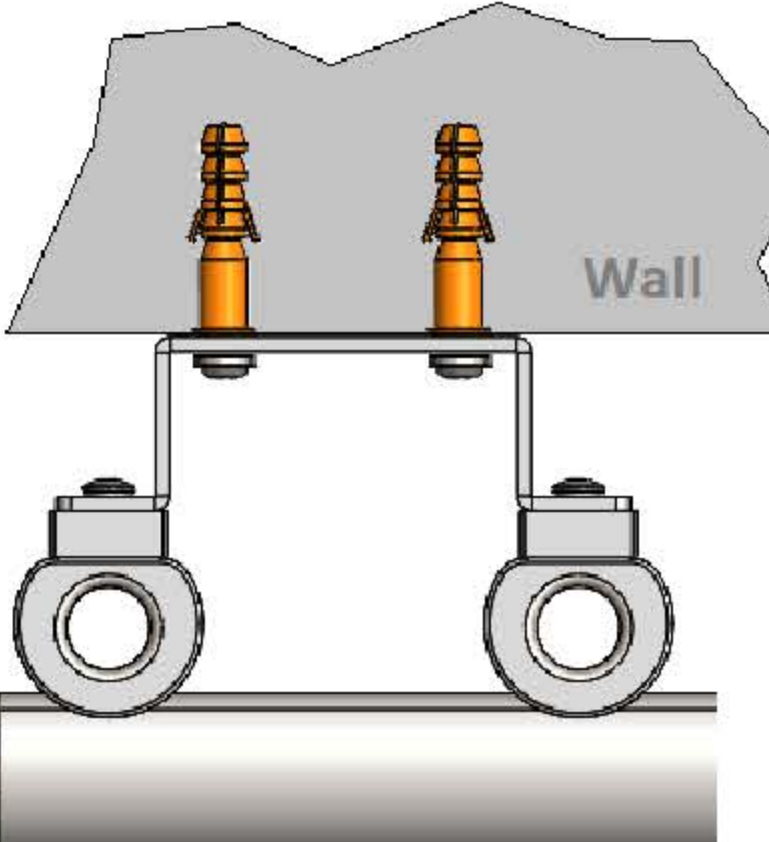

Tighten the screws.

Care Instructions

1. Clean the radiator with a lint free cloth with warm water only.
2. Bleeding the radiator is done by unscrewing the bleed needle on top of the radiator with a screwdriver. Once all the air has escaped and water starts to bleed out, tighten the screw.

Note to installer: Please ensure the user understands and is confident with this process.

For any queries regarding installation of Ampio Open or other, please contact us using the details to the right.

