

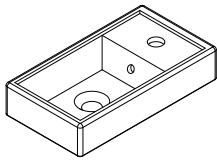



Mozzano Cloakroom Furniture Installation Instruction

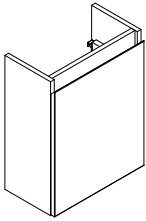


A (x1)

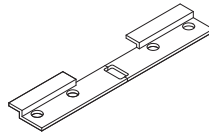


B (x4)





C (x4)



D (x2)




1

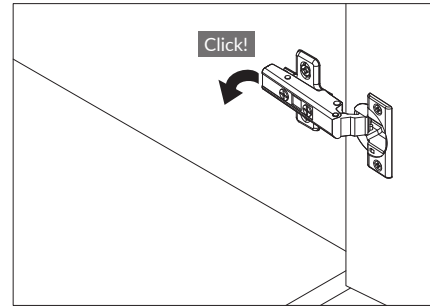
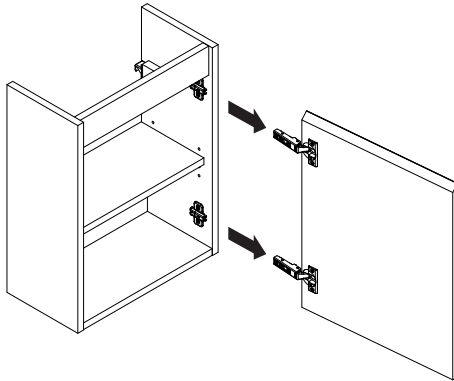


Removal

2

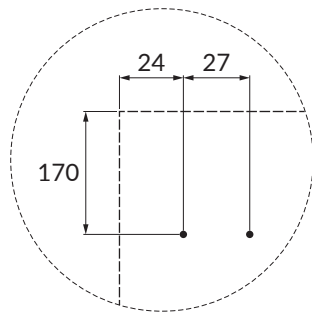


Ø8 mm

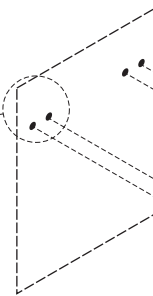

B




A

C


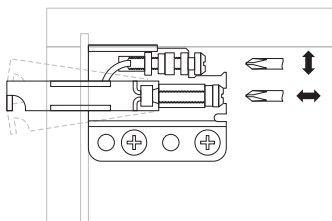


22 mm
19 mm

A

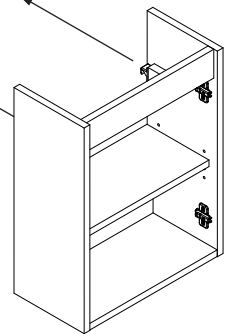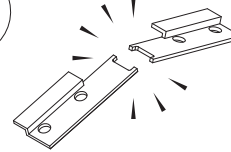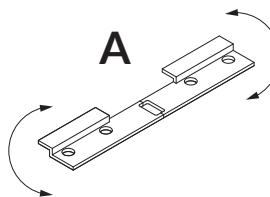


3

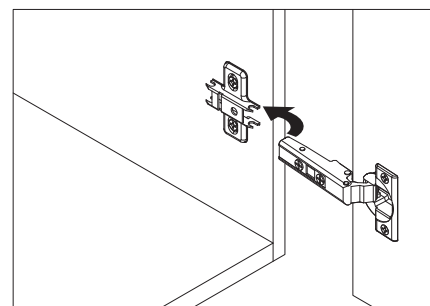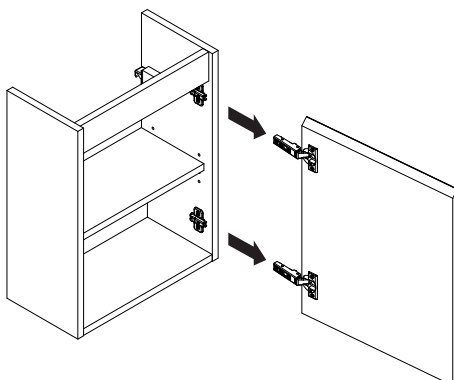


Assembly


4

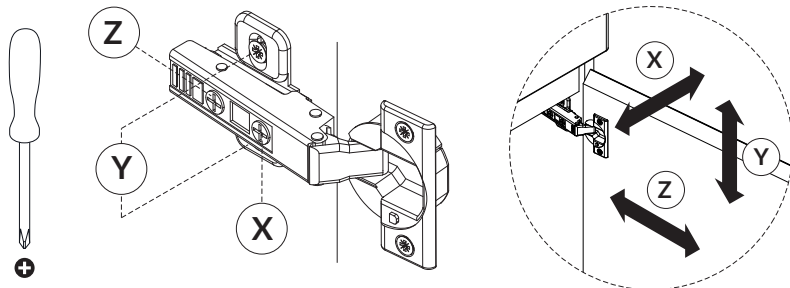


5

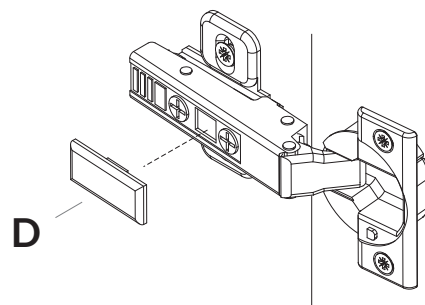


6 A

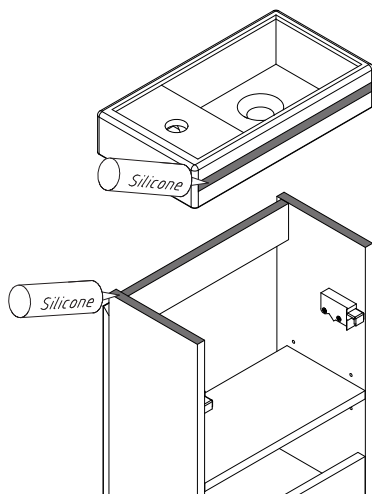


B

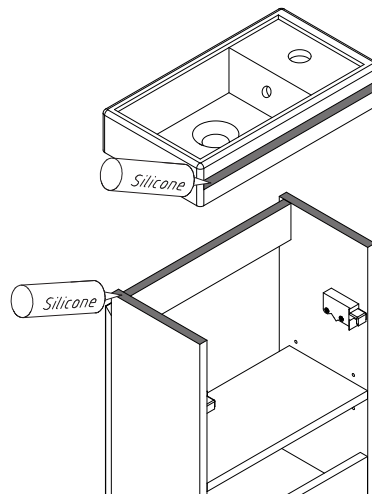


7 A

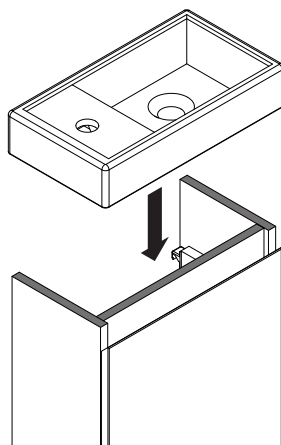

B

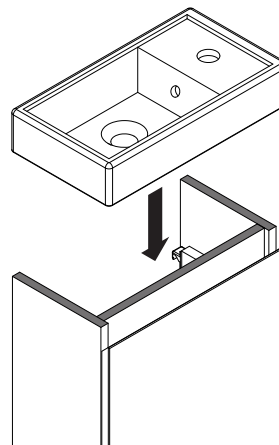

8 A

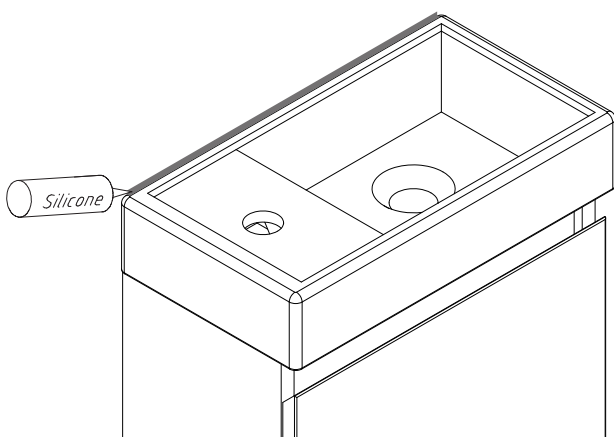

B

