




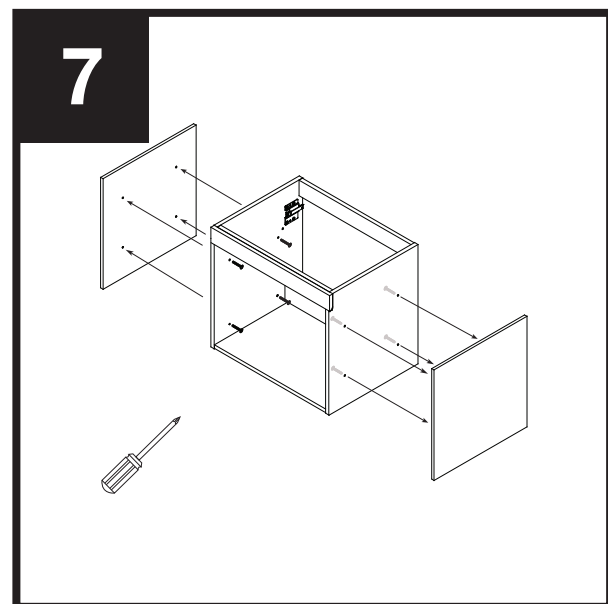

Remove reduced height side gables.

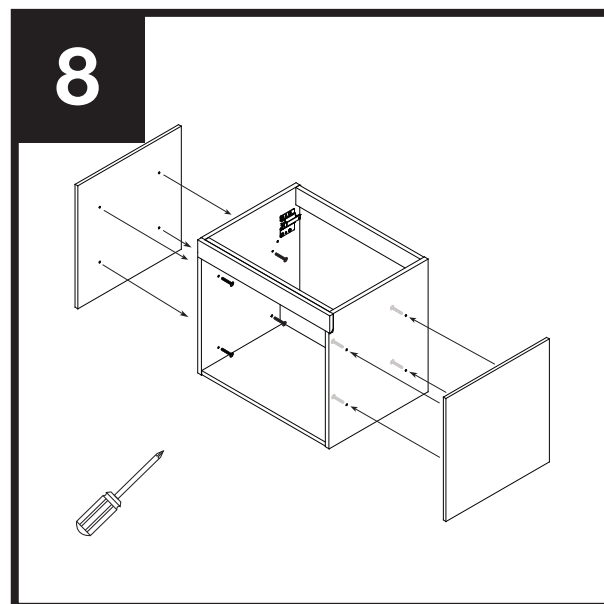

Attach full height gables

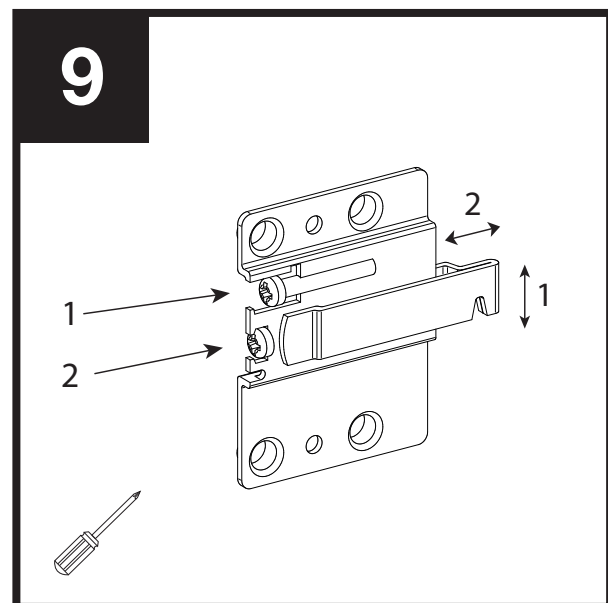

Adjust hanging brackets to ensure unit is level before inserting drawers back into the unit and securing the basin.

### Warranty and Important Information


There is a 5 year warranty on the Stratto furniture range. This covers manufacturing defects, but does not include any failure due to lack of care and maintenance.

Compatible basins are covered by a separate warranty.

# Stratto

Stratto with Ceramic Basin  
Installation guide


TST-906  
TST-908  
TST-910

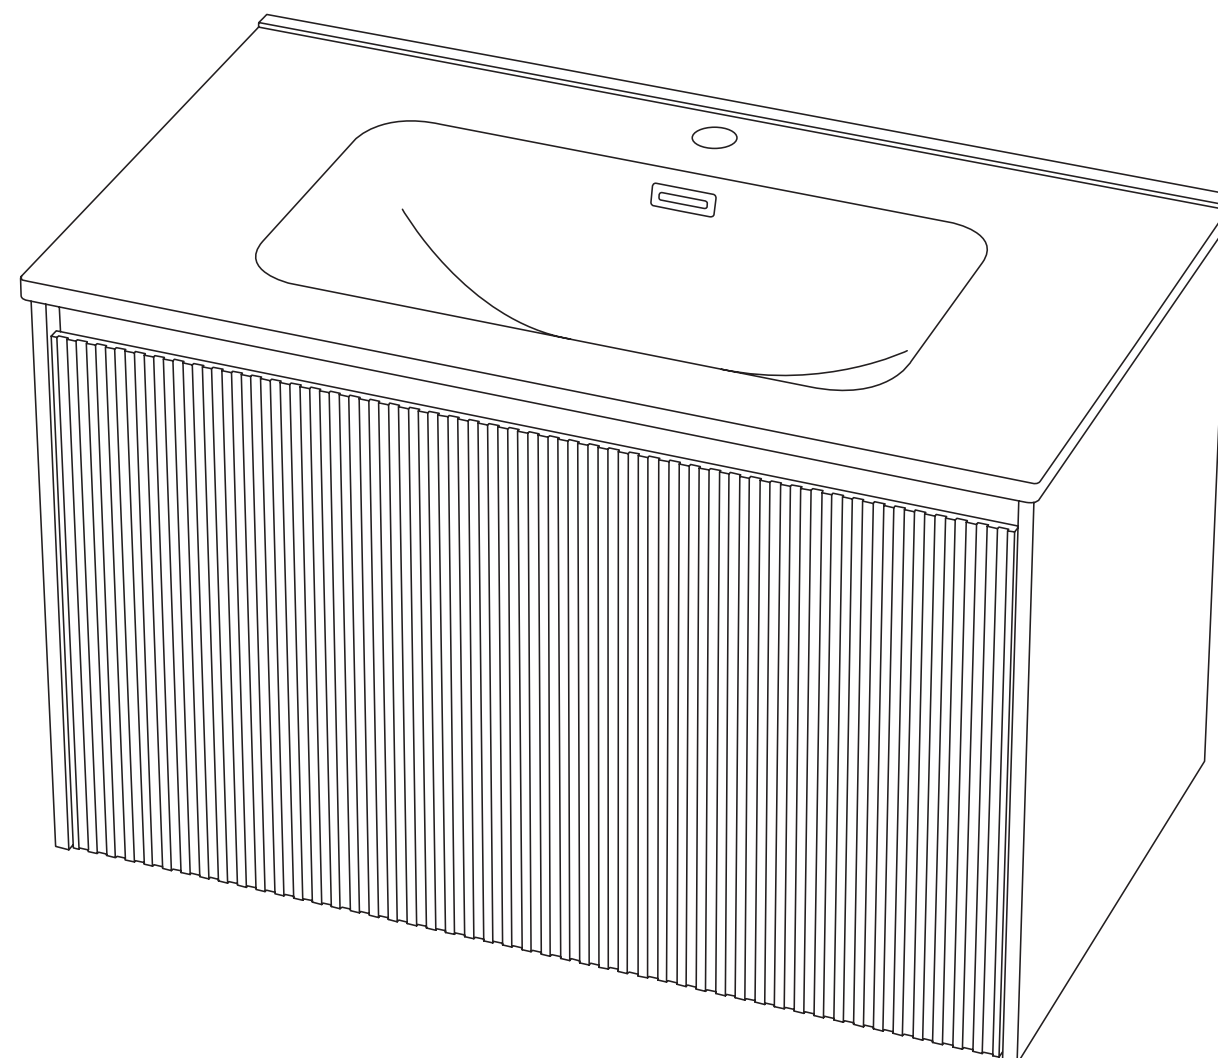

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.


**CHECK YOU HAVE ALL COMPONENTS INCLUDED WITH THE FURNITURE UNIT AND THE ADDITIONAL TOOLS NEEDED.**

X2 SCREW M4X25

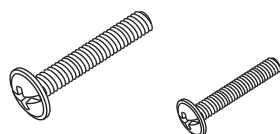



X8 SCREW M4X22

X8 SCREW  
5X50

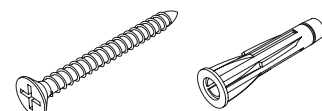


X8 WALL PLUG M8

X2 SUSPENSION  
PLATE

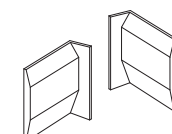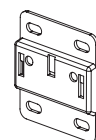


X1 LEFT COVER  
CAP AND RIGHT  
COVER CAP

TOOLS

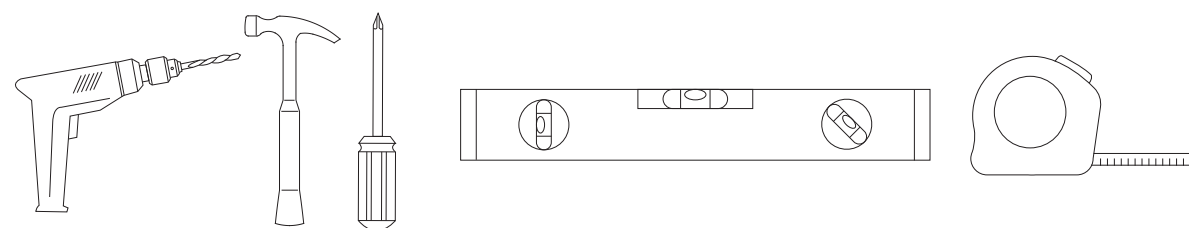


**3**

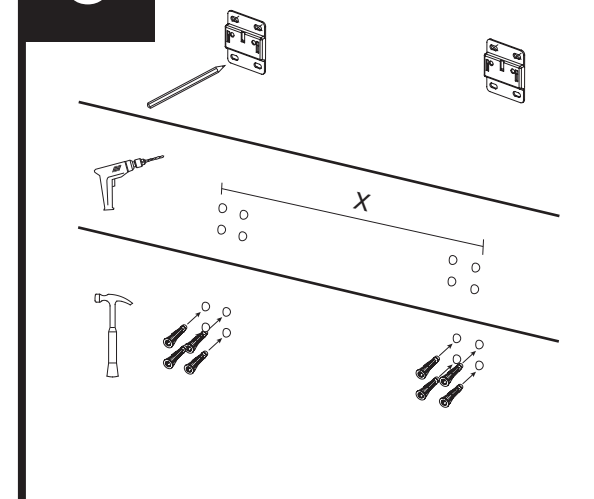


Mark up fixing position of suspension plates on the wall. Drill corresponding holes and fit wall plugs.

**4**

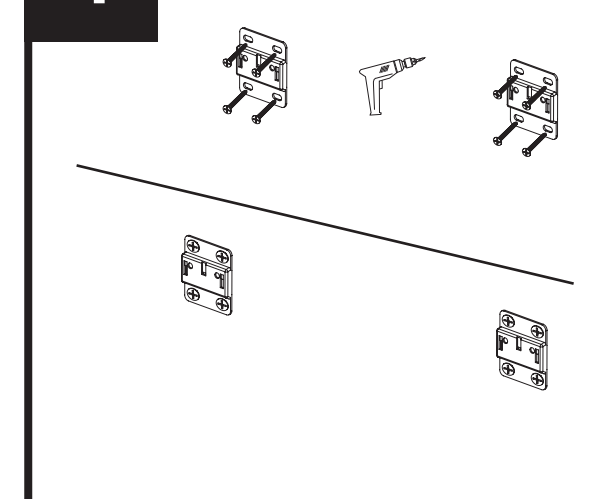

Fix Suspension plates to the wall, check plates are aligned with spirit level.


**1**

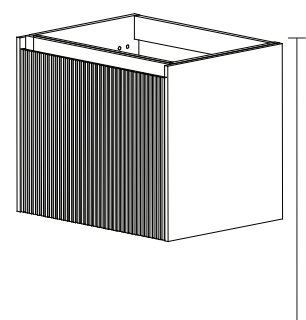

85cm - RECOMMENDED FIXING  
HEIGHT FROM FLOOR  
TO TOP OF BASIN


Measure up from the floor to the recommended installation height of the assembled unit with the basin, to help determine height of Suspension plates.

**2**

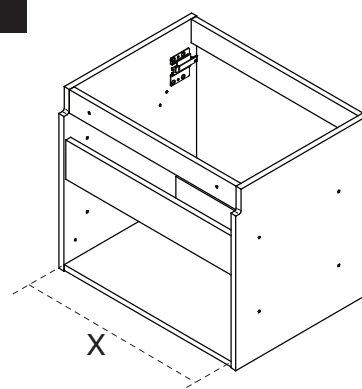


Remove all drawers before installing. Measure internal width of cabinet to ensure fixing position is correct for the suspension plates

**5**

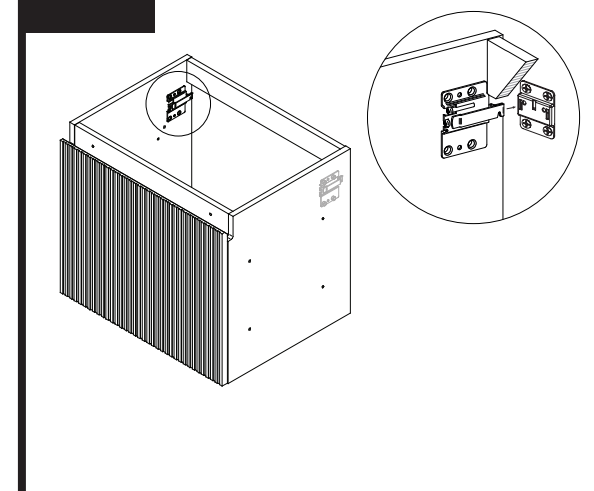

Mount unit onto the wall and ensure unit is secure

**6**

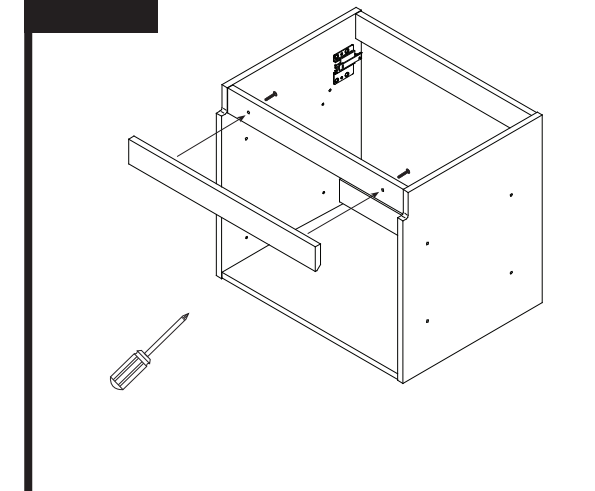

Attach unit trim using screws provided

**tissino**

**tissino**