

TRGIM
1118

Installation Manual

Giorgio Wall Panels

Giorgio Series
Wall Panels





tissino

Designed to Inspire
Made to Experience


Installation Guide

Giorgio Wall Panels


Tools
Required

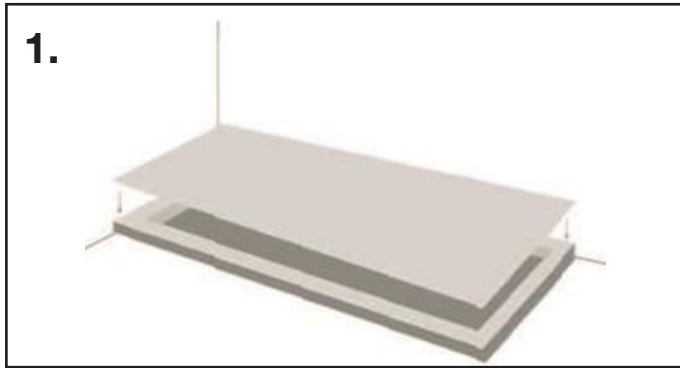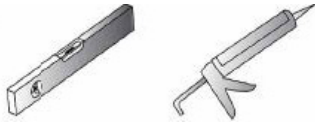


Before starting, make sure the wall are smooth and dry. Wall board packaging can be used to protect the shower tray during installation.

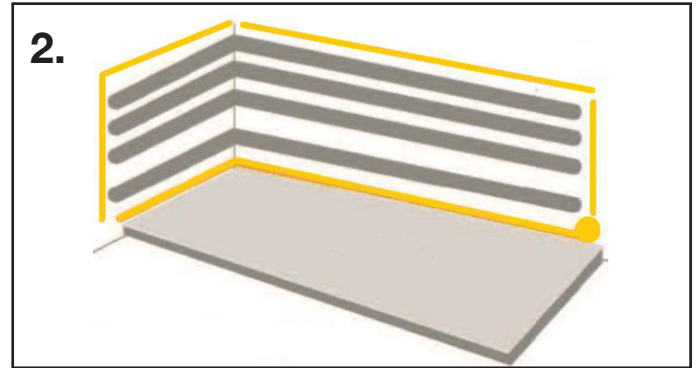

Apply MS Polymer adhesive to the walls, followed by adhesive tape on the perimeter of the wall board position.

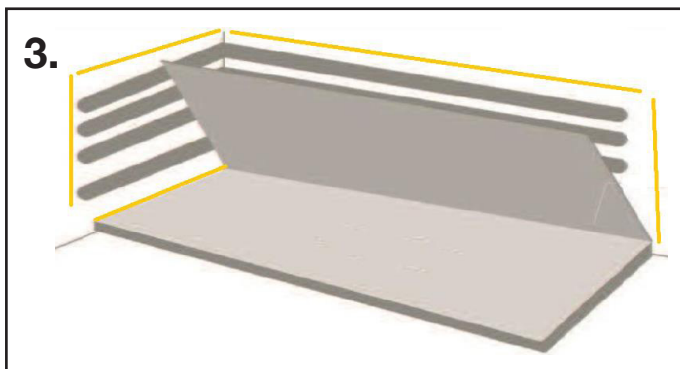

Place the panel on top of the tray in line with the adhesive tape, slowly lift the panel and press firmly against the wall.

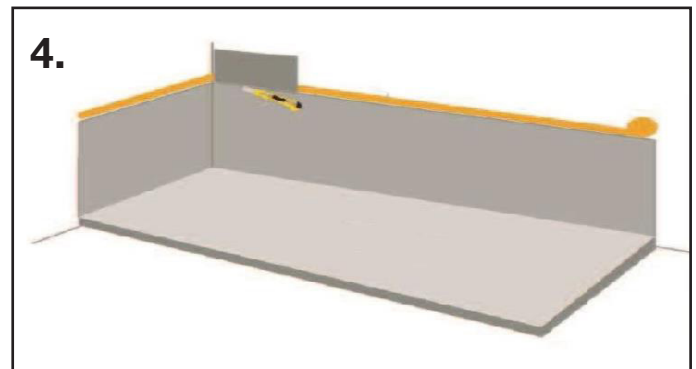

Finally apply MS Polymer in the joint between the board and the wall. Remove any excess putty and cut the remains of adhesive tape.

Important

Please wait for 24 hours for the MS Polymer adhesive to set before fixing shower screens.

Cleaning Instructions

Use soap with a sponge or a non-abrasive cloth and rinse with hot water.

Warranty Exclusions

- Damages caused by misuse of the product
- Failure to follow these instructions resulting in bad installation
- The use of materials not suitable for cleaning

tissino

Designed to Inspire
Made to Experience

T 0345 582 8000
E info@tissino.co.uk
W tissino.co.uk

Lyncastle Road
Appleton Thorn
Warrington WA4 4SN