


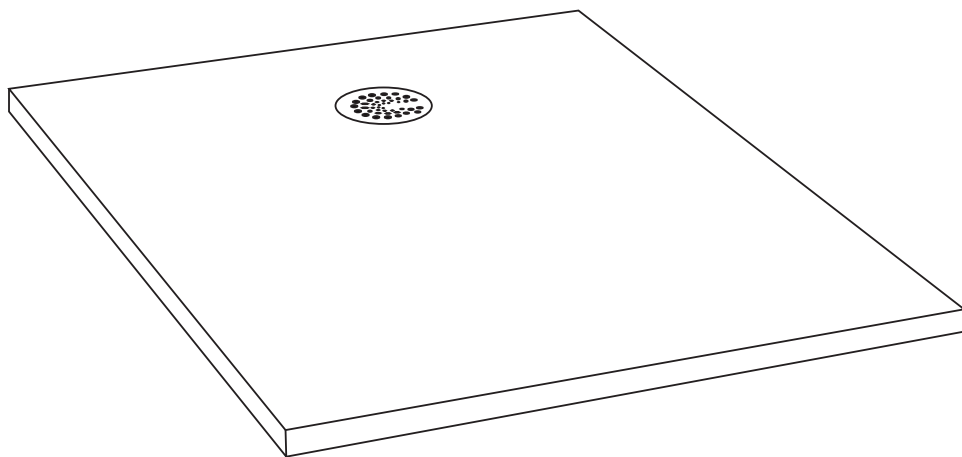

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.

Before you start

- Please read these instructions carefully before commencing the installation work.
- Store the shower tray in a flat and horizontal position until it is installed.
- Protect the top surface of the tray during installation and during subsequent works using the packaging the tray was supplied with.
- Inspect the tray for any damage before starting installation.
- Can be fitted on solid floor or wooden floor; please see appropriate section for instructions.

Important

- Always check for compatibility of colour and surface prior to installation as slight variations can occasionally occur. If a problem is identified, please contact your supplier immediately, who will be happy to deal with any issues.
- Once a tray is fitted or cut, it is deemed acceptance of product.
- Check the tray thoroughly for signs of damages or defects and NEVER begin installation until you are 100% happy.
- Claims for defects/damages cannot be made after installation begins.

Solid Floor Installation: Page 4

Suspended Floor Installation: Page 6

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.

Fitting of Waste Trap

- Please refer to the installation guide included with the waste trap.

Important

- If tile adhesive or some other material comes into contact with the shower tray, clean off with appropriate cleaning products. DO NOT USE any acidic or abrasive cleaners, or rub the surface of the tray directly.

Care & Maintenance


- Cleaning and maintenance of Tissino shower trays does not require any specific maintenance. Usually, rinsing the tray properly and wiping with a soft cloth to ensure there is no cleaning product residue left is sufficient.
- Clean with liquid soap and water and a soft non-abrasive cloth or sponge. Rub gently with a circular motion and rinse with plenty of water.
- DO NOT use cleaning products containing acetone or alcohol, or aggressive cleaning products such as bleach, hydrochloric acid, caustic soda or detergents containing anionic surfactants.
- In areas of hard water, it is recommended that the shower tray is cleaned more frequently to prevent the build-up of limescale on the surface.

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.


Mont

Shower Trays


Installation Guide Solid Floor Installation

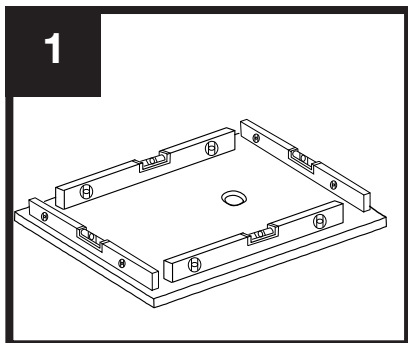


Check the tray that it is level and flat by laying the tray on a firm level surface and confirming that all edges are straight using a spirit level or straight edge.

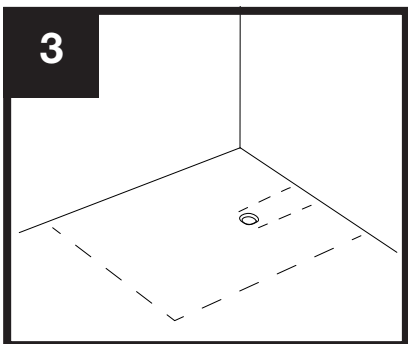

Mark the perimeter and waste aperture on the floor.

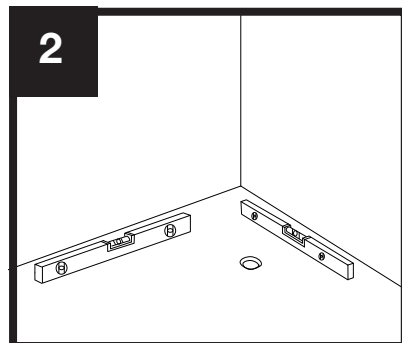

Prepare a perfectly level and smooth floor.

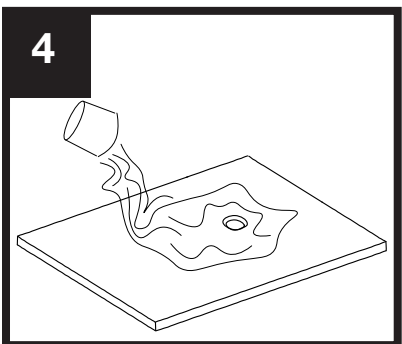

Cut the floor for the trap and waste pipe, ensuring there is sufficient fall on the pipe to allow water to drain fully from the tray.


IMPORTANT – It is recommended that the floor cutout is 10mm larger on all sides than the aperture in the shower tray, so that the circumference of the waste aperture is fully supported. Lay the waste pipe and connect the trap to it. Dry-fit the tray to the waste connection and test for water flow

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.


Mont

Shower Trays

Installation Guide Solid Floor Installation

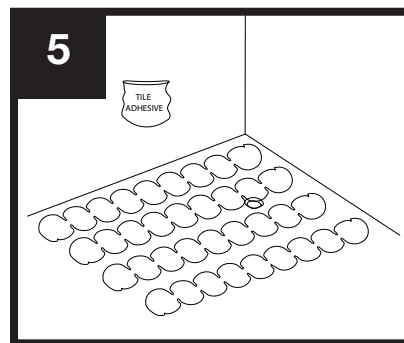


Apply flexible floor tile adhesive in runs to cover the area of the tray.

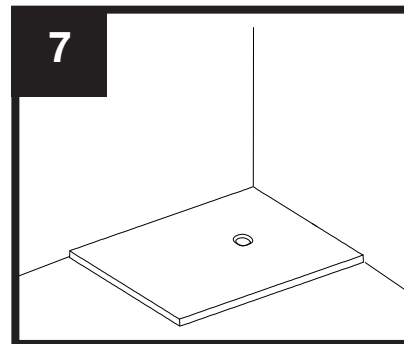


Connect the waste trap, following the instructions supplied with the trap. Ensure that the trap remains below the level of the tray during installation, otherwise there may be damage to the tray or inadequate drainage once the tray is installed.

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.

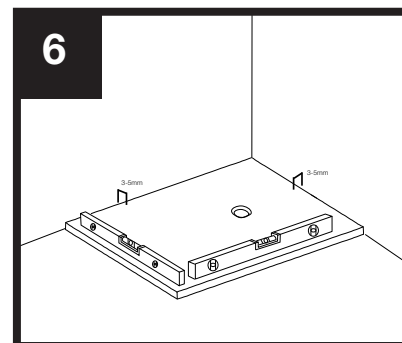

Lay the tray on the tile adhesive and check that it is level in all directions. Ensure a 3-5mm gap between wall and tray.

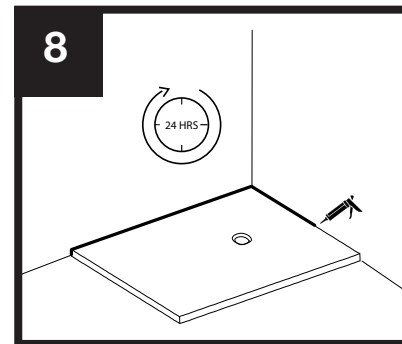


Once the tile adhesive has set (typically 24 hours), further installation work such as tiling and installation of shower screen / doors can proceed. The tray should now be sealed to the wall with an appropriate silicone sealant.


Mont

Shower Trays


Installation Guide Suspended Floor Installation

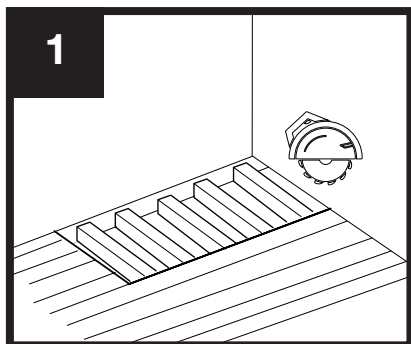


Prepare a perfectly level and smooth floor. It is strongly recommended that the floorboards are replaced with exterior grade plywood to ensure a flat and stable surface to support the tray. Cut away the floorboards from the area where the shower tray is to be installed.

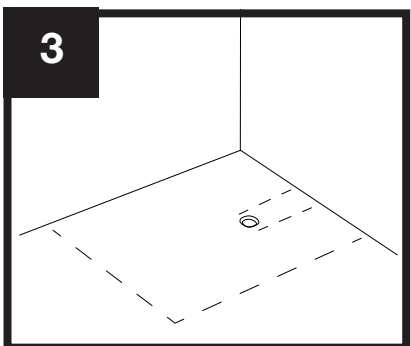

Mark the perimeter and waste aperture on the floor.

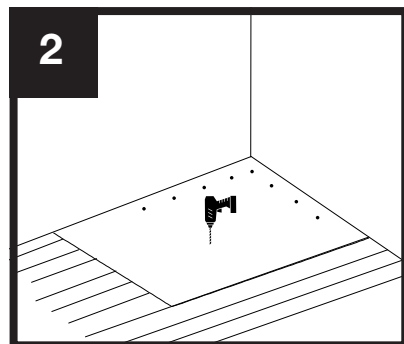

Replace the floorboards with equivalent thickness marine / waterproof plywood.

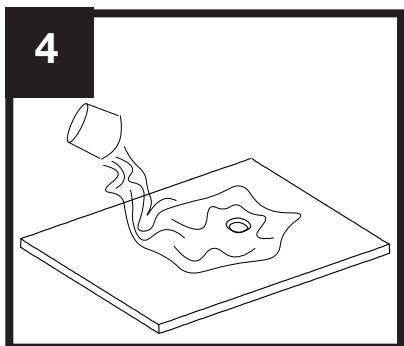


Cut the floor for the trap and waste pipe, ensuring there is sufficient fall on the pipe to allow water to drain fully from the tray.


Mont

Shower Trays


Installation Guide Suspended Floor Installation

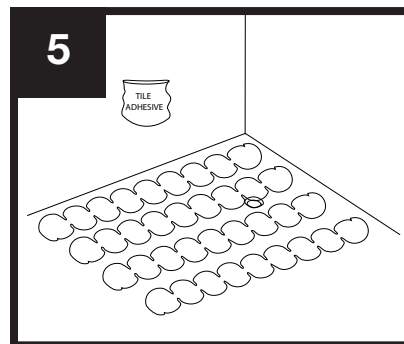


Apply flexible floor tile adhesive in runs to cover the area of the tray.

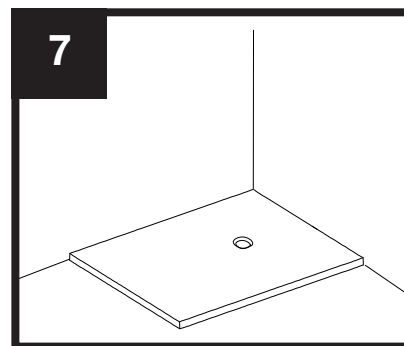

Connect the waste trap, following the instructions supplied with the trap. Ensure that the trap remains below the level of the tray during installation, otherwise there may be damage to the tray or inadequate drainage once the tray is installed.

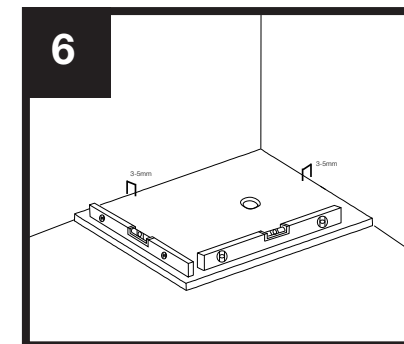

Lay the tray on the tile adhesive and check that it is level in all directions. Ensure a 3-5mm gap between wall and tray.

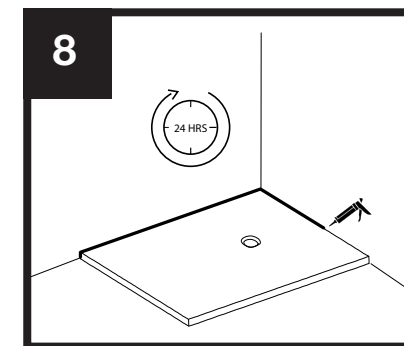

Once the tile adhesive has set (typically 24 hours), further installation work such as tiling and installation of shower screen / doors can proceed. The tray should now be sealed to the wall with an appropriate silicone sealant.

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.

Unit 2, Lyncastle Road, Warrington, WA4 4SN
+44 (0) 345 582 8000
www.tissino.co.uk

6

tissino
Your bathroom, made beautiful.

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.

Unit 2, Lyncastle Road, Warrington, WA4 4SN
+44 (0) 345 582 8000
www.tissino.co.uk

7

tissino
Your bathroom, made beautiful.

Failure to install per the installation instructions may invalidate your guarantee, please follow instructions carefully. In the unlikely event that this product should fail please contact the retailer from which the item was purchased.