
# **Rivelo Showers - Pivot Door**

Technical Overview, Installation & Care Instructions

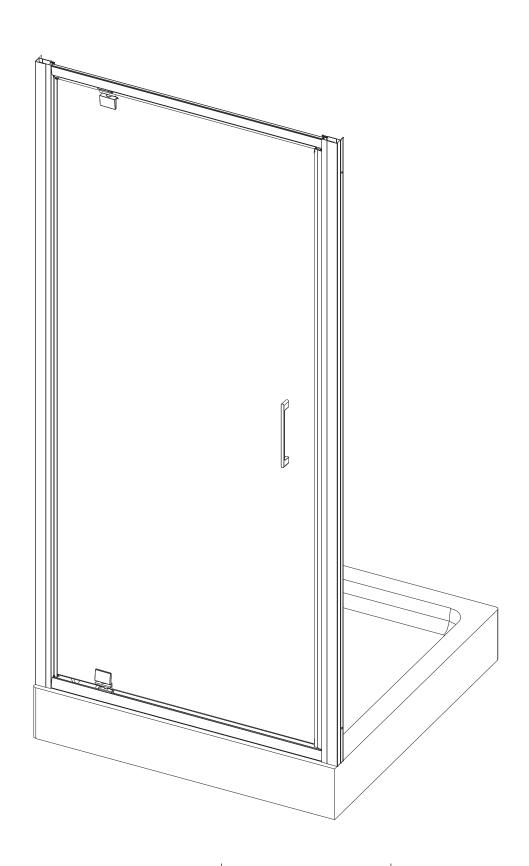





Designed to Inspire Made to Experience

T 0345 582 8000

E info@tissino.co.uk

W tissino.co.uk

Lyncastle Road Appleton Thorn Warrington WA4 4SN

## BEFORE YOU START, HERE IS SOME IMPORTANT INFORMATION

#### 1) General Information

Please inspect this product upon delivery, any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. TAKE CARE WHEN HANDLING GLASS PARTS - AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE. Glass breakage claims will not be accepted after the product has been unpacked.

Please note: Aluminium is a soft metal, and undergoes a series of extrusion, fabrication, polishing and anodising processes in order to create your finished shower enclosure. Some light surface marks are normal, and is a result of the manufacturing processes. Quality control has ensured that this item is of a good standard, and is fit for purpose.

#### 2) Additional Notes

Please read these instructions carefully before starting installation. Special care should be taken when drilling walls to avoid hidden pipes or electrical cables. Note: this product is heavy and may require two people to install.


#### **TOOLS REQUIRED**

DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	

DESCRIPTION	PART IMAGE
Drill	
Flat-head Screwdriver	
Cross head Screwdriver	PZ1
Mallet	
Silicone Sealant	

 $\stackrel{/!}{\sim}$  This product is heavy and may require two people to install.

# **ASSEMBLY INSTRUCTIONS-DRAWING**

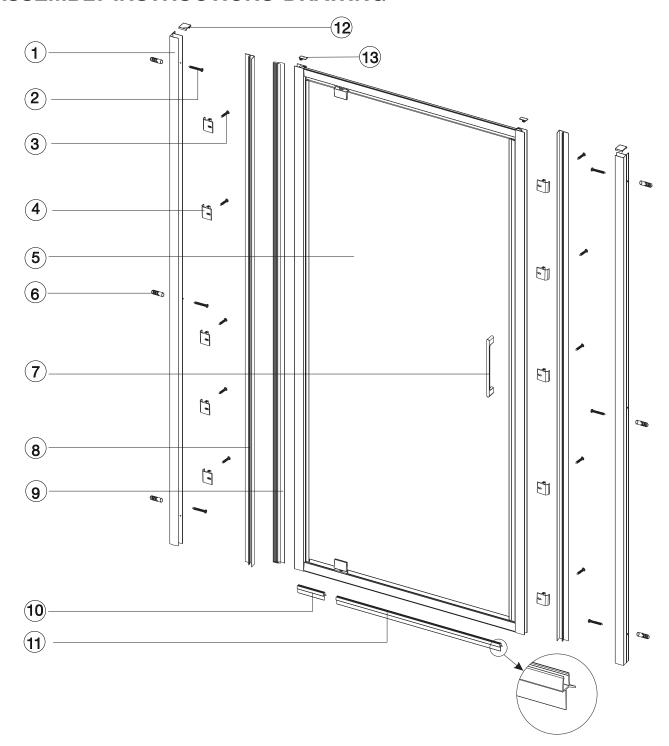


- (1) 2x Wall Profile
- (2) 6x Screw 4x30
- (3) 10x Screw 4x12
- (4) 10x Wall Profile Cover Plastic Parts
- (5) 1x Pivot Door
- (6) 6x Wall Plugs
- (7) 1x Handle


- (8) 2x Wall Profile Cover Strips
- (9) 1x Vertical Seal
- (10) 1x Bottom Seal A
- (11) 1x Bottom Seal B
- (12) 2x Wall Profile Cover Caps
- (13) 2x Vertical Profile Cover Caps

### ASSEMBLY INSTRUCTIONS - RECESS FITTING


If you require help, we advise you to contact a competent plumber NOTE: This product is fully reversible. To install the opposite hand to what is shown please reverse the installation method/turn upside down

### FITTED PIVOT DOOR AND SIDE PANEL DRAWING

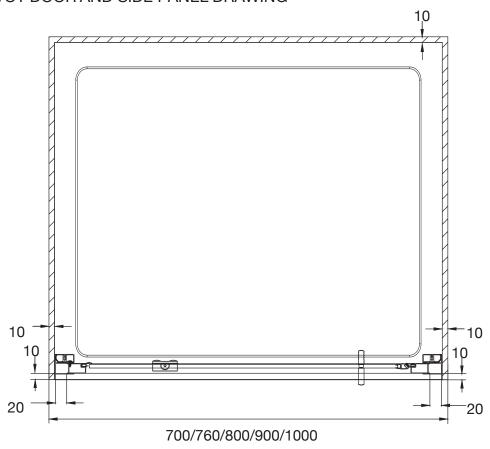


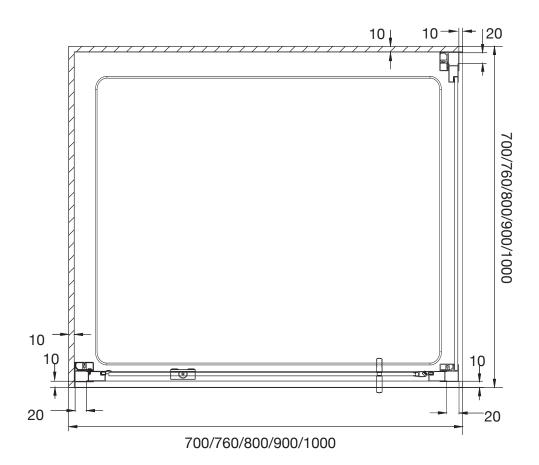


Step 1 MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING THIS SHOWER PANEL / DOOR

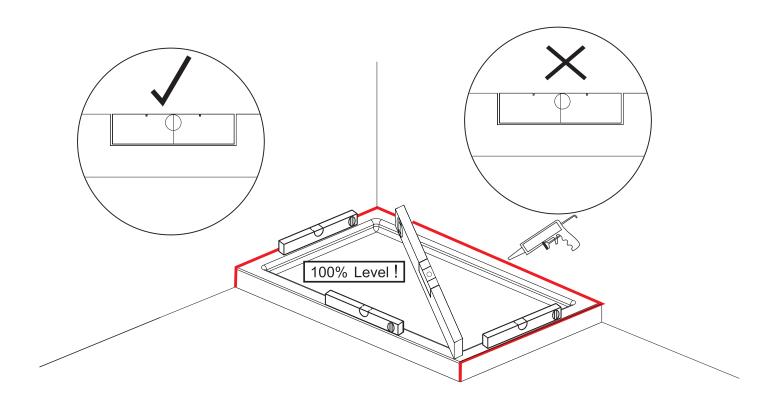


Step 2 MARK WALL FIXING POSITIONS AND DRILL WALL HOLE

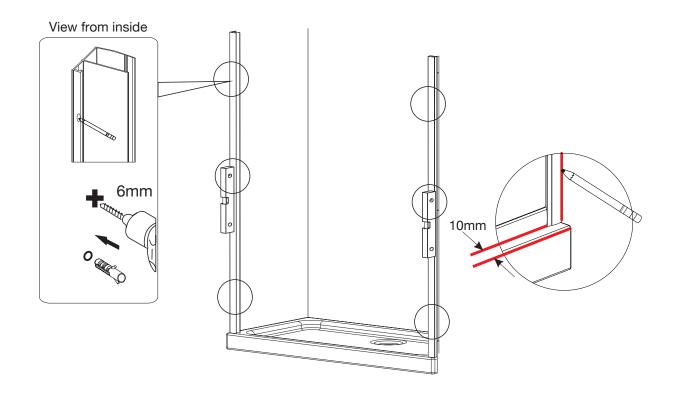



Step 3 SLIDE WALL PROFILES ONTO DOOR

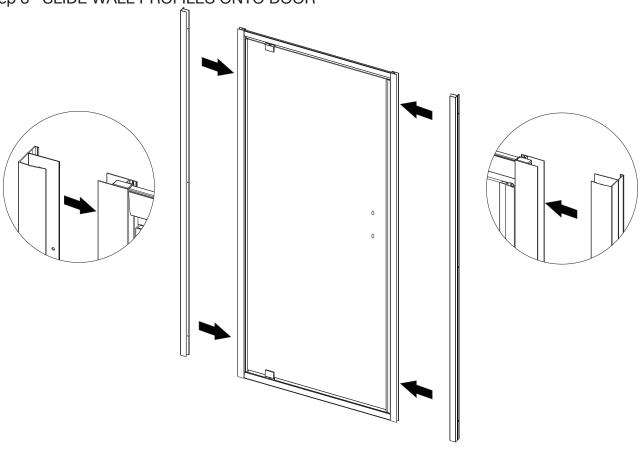


Step 4 FITTING THE WALL PROFILE

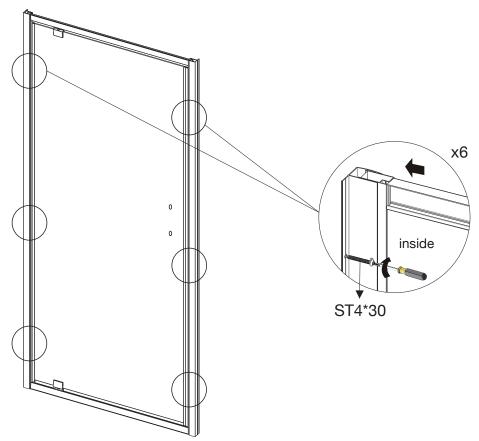

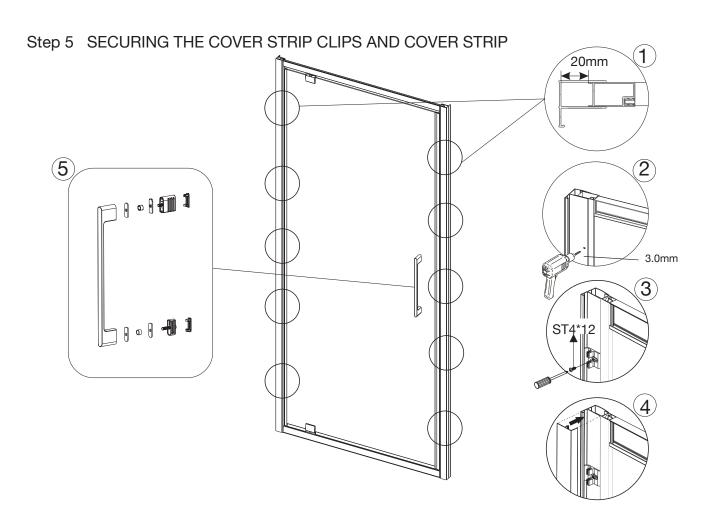


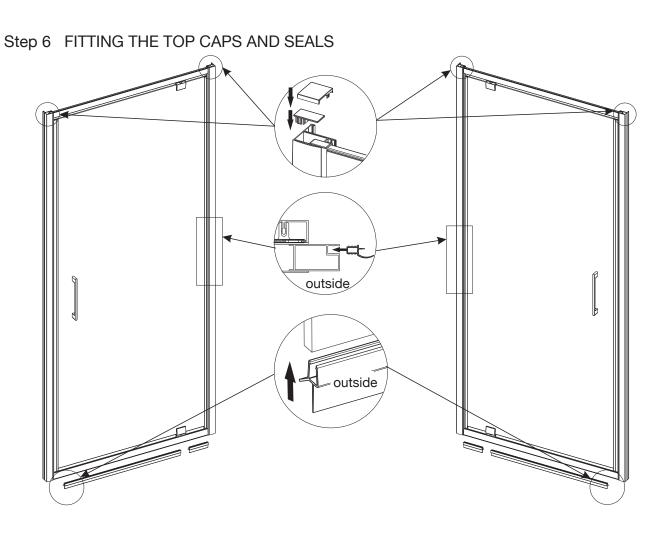

Step 7 CUT THE SEAL ON THE TOP PIVOT BRACKET SIDE

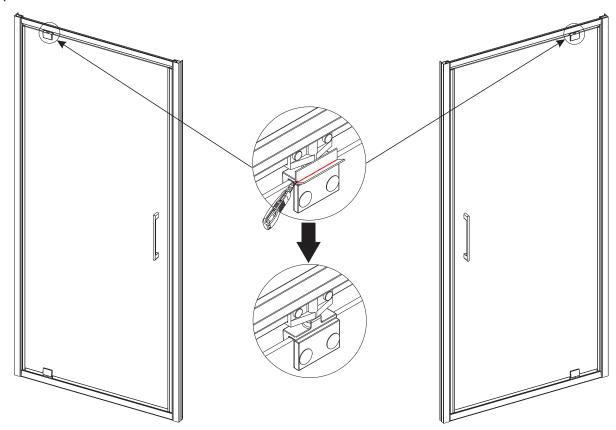

Step 8 SILICONE THE OUTSIDE EDGES

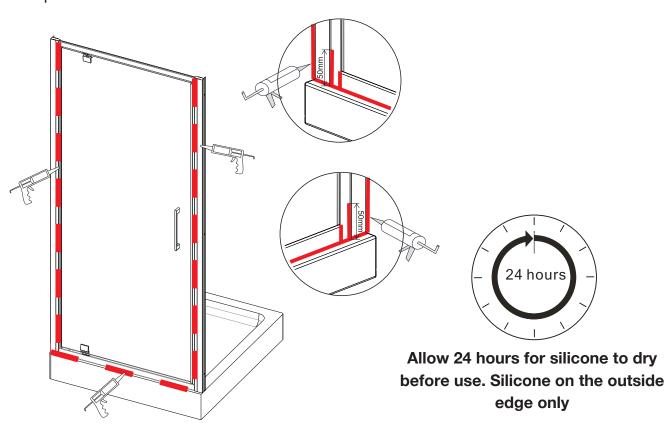

# CARE AND MAINTENANCE

# 1) AFTER CARE INSTRUCTIONS


Regularly clean your shower product with warm soapy water to prevent lime scale build up. Do not use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.

## 2) MAINTENANCE

Clean the plastic parts with a cloth and mild detergent. Never use any abrasive creams, dissolvents, acetone or detergents and disinfectants that contain chlorine. The supplier accepts no liability for any type of use of care other than those contained in these instructions. The supplier reserves the right to introduce technical changes without notice.

# **Quality Assured**

Thank you for purchasing an item from the Tissino range of products. The quality of the materials, components and workmanship that have created this product are of the highest standard. We strongly recommend that you use the services of a reputable and qualified plumber to install this product.

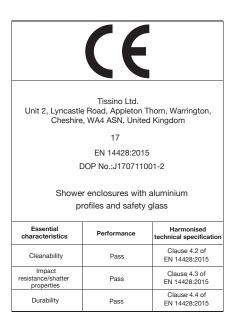



T 0345 582 8000
E info@tissino.co.uk
W tissino.co.uk

Lyncastle Road Appleton Thorn Warrington WA4 4SN